


Bay Window Measurement Guide – Square or Box Bay – Roman Blinds

Tools you will need:

- Metal tape measure, Pencil, Ruler, 2 Pieces of card or paper with square edges

All 3 blinds meet in the corners but do not overlap.

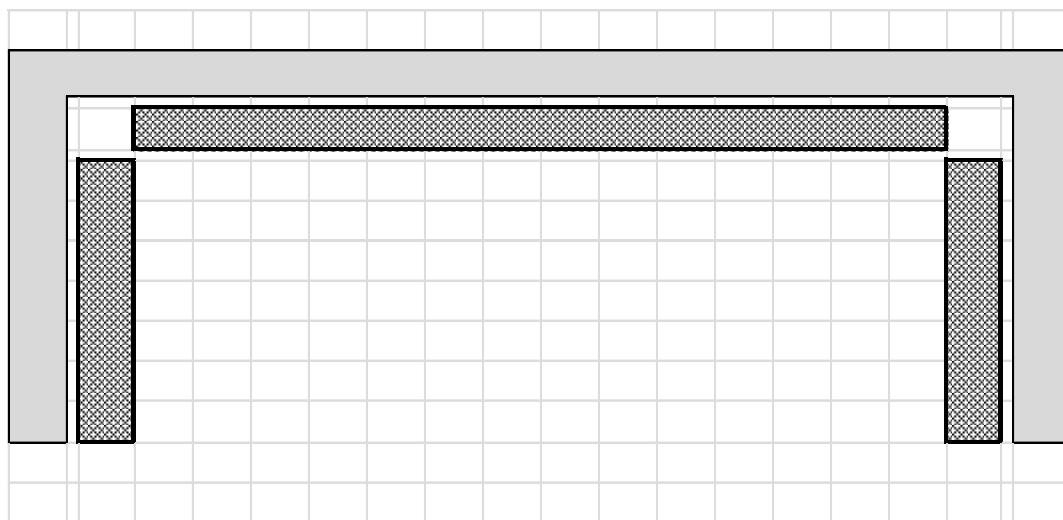

- Measure from corner to corner across the window for the front blind, then deduct 90mm (9cm) to allow for the 45mm space required at each end. Order the blind as “exact” fit.
- Measure the side blinds individually into the corner and deduct 45mm (4.5cm). Order the blinds as “exact” fit.

When opting for this layout please bear in mind that any obstructions such as handles etc. will have an effect on the size of blinds you order.

ALWAYS CHECK THE WIDTHS IN 3 PLACES AS YOU WOULD FOR STANDARD WINDOWS AND USE THE SMALLEST WIDTH, BAY WINDOWS ARE MORE PRONE THAN STANDARD WINDOWS TO WIDTH VARIATIONS.

Measure the drop of your blinds

Drops are measured the same way regardless of option A, B or C. Measure the drop by taking the measurement from the top of the recess to the window sill, in three places as shown. Measure the width of the window recess from wall to wall, in three places as shown. Take the smallest measurement. We will make all adjustments to ensure your blinds fit perfectly.

